

Castle Care-Tech Ltd.

Omega *petite* Alarm System Operating Instructions

ADDENDUM FOR USE WITH OMEGA 5e CONTROLS

Please note the following variations from the printed Omega *petite* instruction manual for use with the Omega 5e Control Panel:

1.3 Fault Warning During Exit:

Special care should be taken to ensure that detectors not forming part of the 'exit route' are clear before attempting to set the system.

4.4 Changing Your Access Code:

The facility for the user to change the access codes has NOT yet been implemented in the Omega 5e. Please arrange with your installing company for any necessary changes.

6.2 Indications:

Additional indications on the Omega 5e are:

'0 - 4' flashing Tamper alarm on zone indicated.